Powerwash Lenovo 100e Gen3

You need to use the keyboard as the mouse will not function in this mode

Φ 0 0 • % 5 8) backspace 8 9 0 6 q w e p ٧ k g

1.) Turn off the Chromebook.
2.)Press Esc+Refresh+Power.

3.) Choose "Advanced options"







5.) You will see the following message, "You are attempting to enable developer mode" choose "Confirm"



6.) You will then see the following message "Confirm returning to secure mode" Choose "Confirm"



7.) When the Chromebook displays a "Welcome!" screen, please choose "Lets Go"

8.) Connect to your WiFi or NPSD_Guest (if in a school building)

9.) Agree to Google Chrome OS terms by choosing "Accept and continue"

10.) You may or may not be asked to Enroll your device into enterprise enrollment. If you are asked, just enter your email and password.

11.) If asked for asset tag information, please DO NOT CHANGE this number and click Next 12.) Your Chromebook is now ready to be used.